



Owner's Manual



INFINITY[®]
from **MARVIN**
REPLACEMENT WINDOWS

INTRODUCTION

Infinity Replacement Windows are durable, beautiful, and low-maintenance. It's a claim we're proud of and a fact you'll appreciate as our windows serve you for many, many years.

This manual was created to teach you a few of the basics about your new Infinity windows. Take a few minutes to flip through this manual. You'll find photos to help you identify your Infinity products, general information on cleaning, and answers to common questions. There are also simple, small things you can do to ensure years of perfect service.

If you have a question or experience a problem with your windows that is not mentioned in this manual, just call your local Infinity retailer for help or visit our web site at www.infinitywindows.com.



TABLE OF CONTENTS

Annual Checklist	3
Infinity Window Products.....	4
Infinity/Integrity Door Products	5
Glass: Condensation, Cleaning and More	6
EverWood™ Finishing (Windows)	10
Finishing Bare Interior Wood (Doors).....	12
Ultrex® Care and Maintenance	13
Exterior Care	15
Screen Care and Maintenance	16
Care and Maintenance	17
Operation and Maintenance	
Infinity Double Hung Windows	18
Infinity Glider Windows	22
Infinity Casement Windows.....	24
Infinity Awning Windows	25
Infinity Sliding French/Patio Doors	26
Integrity Swinging French Doors	28
Care of PVD Finishes (Doors)	31
Infinity Warranty.....	32
Integrity Warranty.....	37

ANNUAL WINDOW AND DOOR CHECKLIST

Use this checklist as a maintenance reminder for your windows and doors to help keep your product operating properly and prevent future problems. Once a year should be sufficient.

- Safety first: use caution on ladders, and wear protective eyewear and clothing. When working with primers, paints, stains, cleaning solutions, etc., make sure that you use and dispose of these materials according to local codes or manufacturer's instructions.
- Inspect weather strip for damage or loss of performance. Contact the local Infinity retailer if your weather strip requires replacement. Take care when using paints, stains or varnishes. These products contain solvents which, when coming in even momentary contact with weather strip, can cause it to become brittle and require replacement.
- Examine window or door's interior and exterior finish. Periodic cleaning and touchup can extend the life of your finish. (See repainting/refinishing information on pages 10 through 15).
- Inspect exterior caulking around the outer edges of the window or door frame. Trim off any loose caulking and reseal any gaps with a good quality caulk.
- Check all hardware (locks, opening mechanisms, etc.) for smooth operation.
- Inspect exposed hardware screws; tighten if loose.
- Clean sand, dirt or dust from door and window hinges, sills and tracks.
- When soiled, wash the exterior of your doors and windows with warm soapy water; rinse with clean water and dry.



Hazard Notations

Please familiarize yourself with the following hazard notations used throughout this instruction.

Icon	Description	Usage
	Caution	Mistake or misuse could cause damage to the window or result in faulty installation and unit performance.
	Warning	Mistake or misuse could result in personal injury and/or severe damage to unit, equipment, and/or structure.
	Seek Assistance	Help from another individual is necessary to perform the task safely and correctly.
	Tips/Hints	Information on alternative procedure, definitions, helpful hints.

INFINITY WINDOW PRODUCTS



Casement



Awning



Double Hung



Glider

INFINITY/INTEGRITY DOOR PRODUCTS



Sliding Patio Door



Sliding French Door



**Inswing French Door
XO**



**Inswing French Door
XX**

GLASS

CONDENSATION

Before reading this section, pour yourself a nice tall glass of ice water.



During cold winters, there is a large temperature difference between the interior and exterior of your home. When the temperature drops outdoors, the glass on your windows tend to have a lower surface temperature than other surfaces in your home and is the first place that you'll notice condensation in your home. This is not due to any defect in your window or door, it's simply a sign of needing to reduce the humidity in your home.

Warm air is capable of holding more moisture than cool air. As warm vapor filled air comes in contact with a cool surface it loses its ability to hold moisture. When moisture laden air reaches its dew point, moisture condenses on the nearest cool surface. Generally the most obvious surfaces in your home where you'll notice condensation are on your windows or the glass of ice water sitting in front of you.

Condensation on your windows is an unsightly problem. The last thing you want is a fog blocking the view. But the problem goes deeper than that - if condensation is a chronic occurrence in your home, chances are that you have excessive humidity. If water is accumulating on glass, chances are it is accumulating on other harder to see surfaces such as wall and roof cavities. If left uncontrolled, excess moisture can have serious consequences, including:

- Mold or mildew
- Wood rot and warping
- Roof ice build-up
- Damp, ineffective insulation
- Discolored, blistered or bubbling paint
- Damaging moisture inside walls and attic

Excessive interior humidity is more likely to occur in newer or recently remodeled homes with tight, energy efficient construction, causing a build up of moisture to the interior. Information on excessive humidity and how to reduce condensation on your windows can be found on the Internet by searching for "*window condensation*".

INTERIOR MILDEW

If your home has excessive interior moisture, you may experience some discoloration on building materials in various parts of your home, including the lower portions of your windows or doors. This discoloration may be the result of mildew growth and can be removed with Tilex® or with regular laundry bleach on a sponge (mix one cup of bleach to one gallon of water). Wear protective eyewear and skin protection, and keep the area well ventilated. Make sure the surface is clean and reapply if the discoloration persists.

TEMPERED GLASS

Certain Infinity windows use tempered glass for safety reasons. Tempered glass is heated and cooled at an accelerated rate, adding strength and shatter resistance. You may notice a slight amount of distortion – this is normal and due to the tempered glass fabrication process. The logo in the corner of each piece of tempered glass is required by code and safety regulations.



GLASS BREAKAGE

Should the glass in your window or door happen to break, make sure you use the appropriate personal protection equipment to remove the broken glass; eyeglasses or goggles, sturdy gloves, and heavy protective clothing. Dispose of broken glass in a secure container. Failure to properly handle and dispose of glass could result in injury. Contact your Infinity retailer for information on sash or panel replacement.

CLEANING THE GLASS

The best method to clean the glass on your Infinity window is to first soak the glass surface with a clean water and soap solution to loosen dirt or debris. Use a mild, non-abrasive window washing solution and apply with a non-abrasive applicator. Immediately after washing the glass, remove all of the cleaning solution with a squeegee, taking care not to allow any metal surface of the cleaning equipment to touch the glass surface. Make sure that no abrasive particles are trapped between the glass and the cleaning material. Window and door gaskets, sealants and frames are susceptible to deterioration if cleaning solutions are not rinsed and dried immediately after cleaning.



Do not use razor blades, knives or scrapers for cleaning glass surfaces.

GLASS CARE DO'S AND DON'TS

DO

- Clean glass when dirt and residue appear
- Determine if coated glass surfaces are exposed
- Exercise special care when cleaning coated glass surfaces
- Avoid cleaning tinted and coated glass surfaces in direct sunlight
- Start cleaning at the top of the building and continue to lower levels
- Soak the glass surface with a clean water and soap solution to loosen dirt and debris
- Use a mild, non-abrasive commercial window cleaning solution
- Dry all cleaning solution from window gaskets, sealants and frames
- Clean one small window and check to see if procedures have caused any damage

DON'T

- Use scrapers of any size or type for cleaning glass
- Allow dirt and residue to remain on glass for an extended period of time
- Clean tinted or coated glass in direct sunlight
- Allow water or cleaning residue to remain on the glass or adjacent materials
- Begin cleaning without rinsing excessive dirt and debris
- Use abrasive cleaning solutions or materials
- Allow metal parts of cleaning equipment to contact the glass
- Trap abrasive particles between the cleaning materials and the glass surface
- Allow splashed materials to dry on the glass surface

INTERIOR EVERWOOD™ FINISH

Before You Begin

- Read these instructions thoroughly before beginning to stain or paint your Infinity Window. Once finished, it is very difficult to remove the stain or paint and refinish the unit.

EverWood™ Interior

Stainable, paintable Infinity products feature EverWood, an **interior** engineered wood grain surface that requires a paint or gel stain finish to be applied before or immediately after installation.



CAUTION: When applying gel stain or paint finish avoid contact with plastic or vinyl parts such as weather strip, hardware, handles or rollers. Plastic and/or vinyl parts that have had contact with paints, stains or polyurethane will eventually become brittle and may require replacement.

DO NOT sand or use abrasive cleaners on EverWood.

DO NOT allow EverWood to come in contact with petroleum distillates such as benzene, toluene or kerosene.

DO NOT allow EverWood to come in contact with silicone or other adhesives prior to finishing.

FINISHING OR PAINTING EVERWOOD

Preparing and Cleaning the EverWood Surface

Clean the EverWood surface with a damp cloth soaked in warm water. Wipe down with a dry cloth and allow the surface to thoroughly dry.

- If the surface has become soiled try cleaning with a mild detergent, such as 409, applied to a damp cloth. Rinse off cleaning residue with warm water and let thoroughly dry.
- For more difficult stains apply TSP to a clean cloth and wipe soiled area clean. Rinse off cleaning residue with warm water and let thoroughly dry.
- For especially difficult stains or spills apply non-abrasive Go-Jo 1016 to a clean cloth and wipe soiled area clean. After cleaning, rinse off cleaning residue with clear water and let thoroughly dry.

Selecting and Applying a High Quality Gel Stain

Read and follow gel stain manufacturer's instructions and warning for application, preparation and cleanup. Apply the gel stain with a brush in the direction of the wood grain on the supplied test strip of EverWood to determine if the gel stain adequately matches your existing finish before applying stain to the unit. After a good match has been obtained on a sample apply gel stain evenly with a brush to the window unit.

If the stock gel stain applied to the EverWood test strip does not adequately match your existing finish it is possible to custom mix gel stains by adding colorants or combining colors. The exact process will depend on the brand of gel stain you are using. Infinity recommends contacting a stain/paint specialty store to custom mix a matching color for your application.



Prior to staining natural wood it is desirable to apply a wood conditioner to obtain a more even finish. Follow manufacturer's instructions.

Applying Water Based Polyurethane Top Coat

Read and follow the Polyurethane manufacturer's instructions and warnings for application, surface preparation and clean up. After letting the gel stain dry overnight, test an inconspicuous area to see if the surface is dry by wiping the stained surface with a clean cloth. If stain appears on the cloth the stain needs to dry longer before applying the polyurethane top coat. After the stain has completely dried, use a clean brush to apply a top coat of high-quality water based polyurethane. Lightly sand the surface with 400 grit sandpaper taking extra care not to sand through the polyurethane surface and apply one more coat of high quality water based polyurethane.

Applying a Paint Finish

Read and follow the paint manufacturer's instructions and warnings for application, preparation and clean up. TEST a high-quality latex or oil based paint applied in the direction of the wood grain on a sample piece of EverWood before applying paint to the unit.

NOTE: EverWood does not require the use of a prime coat. One coat of high quality paint generally provides adequate coverage.

FINISHING OR PAINTING BARE INTERIOR WOOD (Integrity Swinging Doors)

If you have a brand new, bare wood Integrity door, you must finish it immediately to prevent possible damage to the wood. Make sure bare wood door interior surface is clean and dry. Remove any handling marks, debris, or effects of exposure to moisture by sanding lightly with fine sandpaper and wiping clean before applying your choice of finish. Lap finish coat 1/16" onto the glass to create moisture seal. Integrity uses a rubber-like material between glass panes and wood sash frames to ensure a weather tight seal. Occasionally, an excess of this silicone sealant, called "squeeze out," appears around the edge of the glass. You can safely scrape off squeeze out with a plastic putty knife without damaging the weather tightness of your door. It is extremely important that you do not paint locks, hardware, weather strip or jamb liners. Also, use paints, stains and varnishes with care; they contain solvents which, when coming in contact with plastics and vinyl weather strip, cause these materials to lose their flexible qualities.

PAINTING

Use only a high quality oil base or latex paint. To provide a good adhesion of paint, a compatible prime coat should be applied. Paint with panels open (or removed) and do not close until thoroughly dry. Apply one coat of primer and two coats of top quality paint according to the paint manufacturer's instructions.



CAUTION: Do not apply paint to the Integrity factory prefinish without first contacting your Infinity dealer for proper instructions.

STAINING

Apply stain according to the manufacturer's instructions. Apply as many coats of stain as necessary to achieve the desired color. After the stain is thoroughly dry, apply at least two coats of sealer (i.e. varnish or polyurethane).



Prior to staining it may be desirable to apply a wood conditioner to obtain a more even finish. Follow the manufacturer's recommended instructions.

ULTREX® FINISH

The exterior and interior of Infinity Windows and the exterior of Integrity Doors are made of Ultrex, an advanced glass fiber reinforced material.

CLEANING ULTREX

Clean the Ultrex surface with a damp cloth soaked in warm water. Wipe down with a dry cloth and allow the surface to thoroughly dry.

- Any non-abrasive household cleaner will not harm the finish.



CAUTION: Do not allow Naptha to come in contact with EverWood material.

REPAIRING ULTREX

You will need to supply:

Utility knife

Epoxy putty

120 - 150 grit sandpaper

Putty knife

Quality exterior grade primer

320 - 400 grit sandpaper

NOTE: Consult your representative for information on locally available epoxy putty.

1. Using a utility knife carefully cut around the damaged Ultrex area to remove any jagged edges or loose fibers.
2. Follow manufacturer's instructions for mixing/blending of epoxy. Fill the damaged area thoroughly by pressing epoxy in with a putty knife and remove excess.
3. Once the epoxy has set and cured, sand the repaired area with 120 - 150 grit sandpaper until the desired profile/depth has been achieved. Finish sanding with 320 - 400 grit sandpaper.
4. Lightly sand the surrounding area to remove the factory finish with 320 - 400 grit sandpaper. Coat the repaired and surrounding area with a quality primer per epoxy manufacturer's instructions. When primer has dried and cured cover with a quality exterior grade acrylic latex coating (See Painting Ultrex).

ULTREX® REFINISHING INFORMATION

PAINTING ULTREX

You will need to supply:
320 - 400 Grit sandpaper
Quality exterior grade acrylic latex paint
Foam paint brush
Masking tape



Spot test a small area using the following procedures: After the seven to ten day Acrylic latex paint cure time check to see if the paint has adhered to the unit. If the paint has not adhered to the surface, recheck the surface preparation procedures.

1. Thoroughly sand the factory finish with 320 - 400 grit sandpaper.
2. Wash the surface with water and detergent to remove contaminants, rinse with clear water and dry thoroughly.
3. Mask any window components that will not be painted.
4. Coat the Ultrex with a quality exterior grade acrylic latex paint.
5. Acrylic latex products gain full adhesion after seven to ten days cure.

NOTE: If the finish is scratched, peeled or otherwise compromised down to the Ultrex substrate see previous page on repairing Ultrex.

EXTERIOR CARE

Infinity products feature Ultrex[®], an advanced glass fiber reinforced material, with a finish coat applied during the fabrication process. This factory applied durable finish allows Infinity's exterior to withstand extreme temperatures, atmospheric pollutants while retaining its color and gloss. This translates into a beautiful, low maintenance exterior. Surface dirt can be removed by washing with a mild detergent and rinsing with clear water. Use a soft brush, such as a long-handled car washing brush, to remove any bugs, grime, dirt or dust. Before using more aggressive cleaners on stubborn stains, test the solution on an inconspicuous area before washing. A thorough clear water rinse should follow. After rinsing well and drying, you can use car wax for additional protection and to add shine.

MILDEW ON EXTERIOR SURFACES

Mildew is a fungus that is most common in geographical areas near water such as the East, West, and Gulf Coasts, the Great Lakes area, rivers, valleys and other areas of high humidity. Mildew thrives on warmth and moisture and will grow best under these conditions. However mildew can grow to some degree under most climatic conditions. Mildew growth is usually brown or black in color and, for this reason, may be mistaken for dirt. The presence of mildew can be confirmed by placing a drop of household bleach on the suspected mildew area. If small gas bubbles develop in the droplet of bleach, mildew does exist and can be removed with the following solution:

Use this solution to help control exterior mildew:

- 1/3 cup powder laundry detergent
- 2/3 cup trisodium phosphate (TSP)
- 1 quart household bleach
- 3 quarts of water

Apply solution with a soft bristle brush using medium pressure. Rinse the finish well with clear water after cleaning.

Note: Stronger concentrations of cleaner may damage the coating surface or finish. Always wear protective eyewear and skin protection when using an aggressive cleaning compound

Screen Care and Maintenance

The most effective method of cleaning the screens on your windows and doors is to remove the screens, lay them on a flat clean area (such as a sidewalk), and spray off any dust or debris with water from your garden hose. Allow the screens to completely air dry before replacing in the window or door. If you live in a cold climate, it is recommended that in the winter you remove the screen from your doors. The mesh may collect snow and ice, causing it to sag. Please see individual sections for instructions on screen removal. Contact your Infinity retailer if you require assistance with screen replacement.

NOTE: Certain size screens have a factory bow in the frame; this is to ensure a snug fit and is NOT a defect.



CAUTION: Infinity screens are designed to stand up to everyday use. However, these screens were not intended to act as a safety device. Do not allow children or pets to sit or play on window sills, or to push or fall against window screens, as this could result in a fall through the window or door opening.

Every screen installed on an Infinity product has a non removable label affixed to it that states:



WARNING: Screen will not stop child from falling out window. Keep child away from open window.



INFINITY WINDOWS CARE AND MAINTENANCE

In the following pages you'll find maintenance information on individual Infinity products. Refer to the product illustrations for the names of your particular windows or doors.

Information in this section includes maintenance tips and operational tips, such as removing the window sash. Read completely through the instructions before beginning to work on your windows to make sure you have any necessary tools and parts.

Exterior finishes on doors can be cared for in the same manner as Infinity windows. See interior and exterior maintenance information. Take care with your door's sill - make sure you prevent damage by not getting any paint, solvent or chemicals on sills. See individual door sections for any specialized sill care.


If you are having problems not explained in this manual, or if the solution seems inappropriate for your problem, contact your local Infinity retailer.



*When contacting your Infinity Retailer it may be helpful to provide them with the “**Customer Service Serial Number**” etched on the upper right corner of the glass*



LoE³-366 option

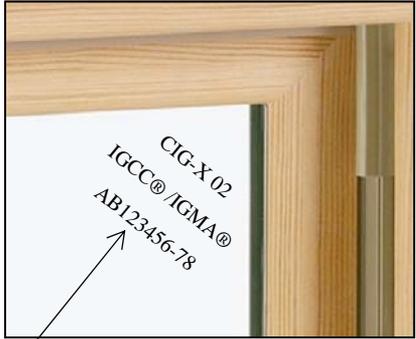

Standard LoE² option

Customer Service Serial Number


DOUBLE HUNG WINDOWS

OPERATION AND MAINTENANCE

Periodically clean the jamb liners where the sash slides. Keep them dirt and grease free by washing with a gentle dish detergent. Check the exterior caulking on your double hung windows annually.

HOW TO TILT YOUR DOUBLE HUNG WINDOWS (for cleaning the glass)

To tilt the bottom sash, unlock the unit and raise the sash about 4". Push down on the tilt button located on top of the sash lock base. Rotate the sash lock past the tilt button and ease top edge of bottom sash to a horizontal position.

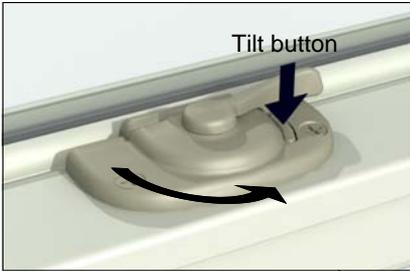

To tilt the top sash, lower the sash about half way. Pull the tilt latches inward (located on the top edge of the sash rail) simultaneously until they clear unit frame. Ease top of sash to a horizontal position.

HOW TO REMOVE THE DOUBLE HUNG SASH (for replacement or repair)

To remove the sash, tilt the bottom sash using the same technique described in the previous section.



Larger sized sash can be heavy and awkward to handle. To avoid injury use assistant to remove larger sash.



When sash is in a horizontal position, lift both sides of the sash upward 2-3" (raising pivot pins out of each clutch). Now rotate the sash until pivot pins clear the jambs and remove the bottom sash from the frame.

Next, tilt the top sash using the same technique described above. When the sash is in a horizontal position, lift both sides upward 2-3" (raising pivot pins out of each clutch). Finally, rotate the sash until the pivot pins clear the jambs and remove the top sash from the frame.

HOW TO REPLACE THE DOUBLE HUNG SASH

First hold the top sash in a horizontal position, top rail toward you, exterior face up. Sash pivot pins must be placed 2-3" above the clutch assemblies when relocating in jamb carrier tracks. Pivot one side of the sash up to enable pivot pins to clear jamb carrier assemblies when aligning sash in tracks, pivot sash back to horizontal (flat) position. Lower sash pivot pins into balance clutch cams. Now, tilt the sash up, pull the tilt latches until they retract fully on both sides, hold them and ease sash into place. Check the nose of each tilt latch to ensure they are fully engaged in the sash guide track of jamb carrier assembly. Raise the top sash to the top of frame.

Check sash pivot pins to ensure they are fully engaged in the clutch cams before proceeding.

Repeat above procedures for bottom sash, except retract the sash check rail guides with the tilt button on the sash lock base when installing.



RESETTING A SLIPPED CLUTCH ASSEMBLY

Measure the clutch dimension from sill on the opposing balance assembly for the same sash and temporarily mark that dimension on the jamb carrier that contains the released clutch (must be within 1/8"). Using a flat screwdriver, rotate the balance clutch cam in the clutch assembly to the released position. Hold the screwdriver firmly and slide the clutch assembly down the jamb carrier to the mark. Rotate the balance clutch cam to the open locked position (cam opening up). Release the screwdriver carefully from the clutch assembly (it must lock in place or damage will occur). Compare clutch heights from the sill for the sash affected. They **MUST** be within 1/8" of each other or damage may occur when sash are reinstalled, adjust height as needed.




CAUTION: Clutches are under extreme spring tension.

REMOVING AND INSTALLING THE SCREEN

To remove the screen lift up the bottom sash to its fully raised position. Grasp and pull inward on both plunger bolts and push outward on the screen. Grasp the frame of the screen and pull down slightly on the screen until it clears the screen channel.

Turn the screen sideways and bring it in through the bottom sash opening. To replace the screen reverse the above procedure.

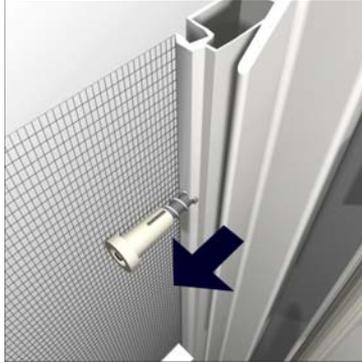

GLIDER

OPERATION AND MAINTENANCE

Periodically clean the tracks where the sash must slide. Keep them dirt and grease free, and spray them lightly with furniture wax to prevent sticking. Be sure to wipe off any excess wax.

SASH REMOVAL

Slide the operating sash to stationary side of the unit (approximately 2"-3" from stationary jamb). With latches depressed, located at the top of the sash, tilt the sash inward until it clears the unit frame; lift the sash off the sill track. To replace the sash, reverse the above procedures.




NOTE: Only the operating sash of a Glider can be removed from the frame.

REMOVING AND INSTALLING THE SCREEN

To remove the screen open the operator sash completely. Grasp the screen pull tabs located on the jamb stile side of the screen. Pull the tabs toward the center of the unit until the screen frame can clear the screen channel. Push the screen out to the exterior and turn diagonally to bring into the dwelling.

Replace the screen with the operator sash completely open and position the screen on the exterior of the window with the springs toward the meeting stile of the unit. Making sure the springs are seated in the screen channel, pull on side tabs until the screen clears the frame. Pull screen in toward the interior until the jamb stile of the screen aligns with screen channel; release tabs.

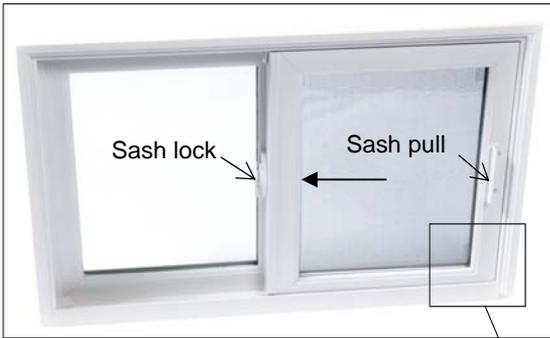

NOTE: Pull tab away from frame and then push out.

CASEMENT


OPERATION AND MAINTENANCE

The roto-gear is the operating mechanism that you crank to open and close your casement and awning windows. Your casement lock seals the window tightly closed. Excessive cranking when closing your window does not improve the seal and may damage your roto-gear.

Roto-gears should be lubricated once a year with white lithium grease (available at any hardware store) to keep operation smooth. The hinge joints and locking mechanism should be lubricated on occasion with a silicone based spray. Be sure to clean off all dirt, debris or sand before lubrication.

Excessive lubrication may cause damage to the window's finish. Make sure that any excess is immediately removed.


The sash tracks should be occasionally cleaned out with a soft bristle brush. If your casement is less than 24 3/8" in width, your roto-gear arms and assembly may differ from those shown. Interior and exterior finishes can be cared for in the same manner as any other Infinity window or door. See interior and exterior maintenance information on pages 10 - 13.

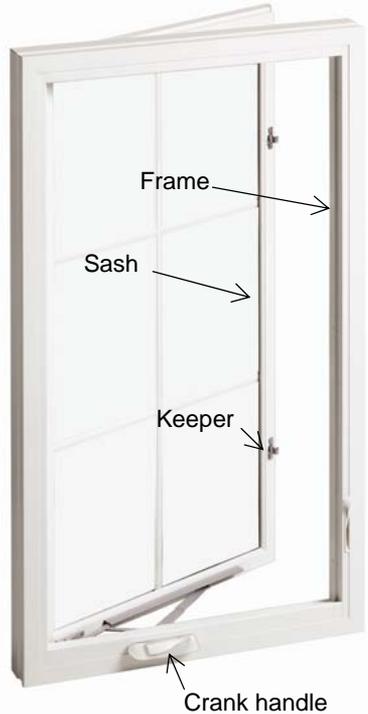

REMOVE AND INSTALL THE SCREEN

To remove casement/awning screen, grasp screen lift. Lift upward and draw screen towards you, removing screen from channel.

To install casement/awning screen, place screen into the upper screen channel. Lift upward and push screen tight against frame. Release screen lift to seat screen into place.

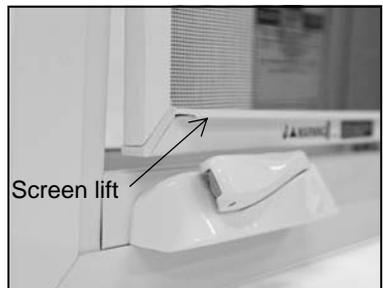



AWNINGS

OPERATION AND MAINTENANCE


Awning hinges, roto-gear operator arms and sash tracks can be oiled with a few drops of light household oil or silicone spray.

Operating hardware should be lubricated during your annual inspection. Simply crank open the window and lubricate hardware with white lithium grease. Interior and exterior finishes can be cared for in the same manner as any other Infinity window or door.

Excessive lubrication may cause damage to the finish of your window. Avoid getting oil and solvents on your finish.

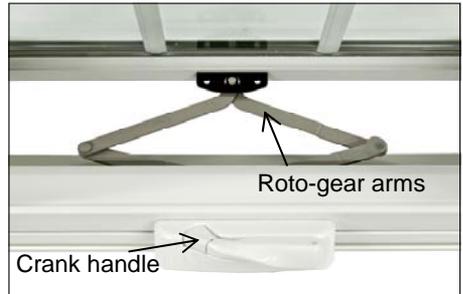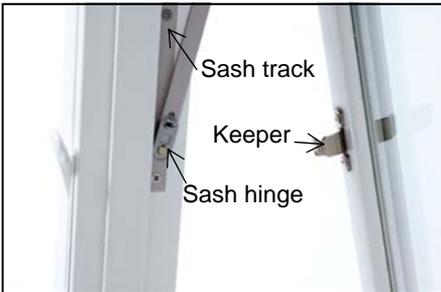

REMOVE AND INSTALL THE SCREEN

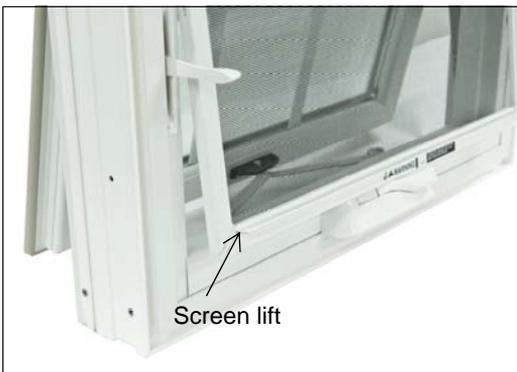

To remove casement/awning screen, grasp screen lift. Lift upward and draw screen towards you, removing screen from channel.

To install casement/awning screen, place screen into the upper screen channel. Lift upward and push screen tight against frame. Release screen lift to seat screen into place.

INFINITY SLIDING FRENCH/PATIO DOORS

OPERATION AND MAINTENANCE

The Patio and Sliding French Doors require very little maintenance to keep them functioning efficiently. Most problems can be eliminated by keeping the sill clean, ensuring smooth door operation. Chemicals, solvents, paints and other harsh substances should never come in contact with the sill. Remove any paint, grease or caulk with 50% isopropyl alcohol. Door handles can be wiped down with a damp cloth to remove fingerprints and smudges.

It is very seldom that door rollers, lock and hinges require lubrication. Occasionally use spray lubricant to keep operation smooth (rollers are visible underneath the operator panel). If you live in a cold climate, it is recommended that you remove the screen door in the winter. The screen mesh may collect snow and ice, causing it to sag.



REMOVING SLIDING DOOR PANELS

Removing door panels is a relatively complicated procedure. If you need them removed, please contact your retailer for a service person to remove the panel for you.

REMOVING THE SCREEN


To remove the screen panel, unlock and partially open the screen door. From the exterior, pry the screen panel guide up with a putty knife starting at one corner. Pull the guide off the track working your way toward the other end. Once the bottom of the screen panel is completely released from the sill track, pivot the bottom of the screen out and push the top of panel approximately 5 degrees toward the head jamb.

This will release the screen panel rollers from the head jamb screen track. Remove the panel from the door.

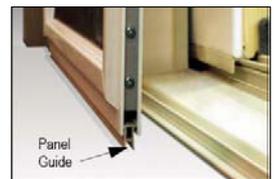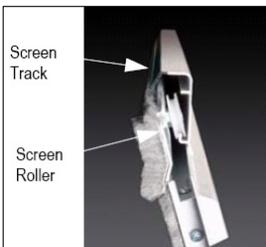

To reinstall the screen, hold the screen panel with the top rollers facing you. While tilting the bottom of the screen panel away from the door, lift the rollers into the screen track and pull the panel toward your body to engage the rollers in the track. Make sure the rollers are seated in the track by moving the screen panel back and forth. Once you are sure the rollers are fully seated, pivot the screen panel into position toward the sill and place the bottom screen panel guide into the sill track by lifting it with your fingers or by lifting with a stiff putty knife.

The screen can be adjusted from the interior by loosening or tightening the top roller screw nearest the locking jamb. Adjust the screen so that it is parallel to the locking jamb or casing. An even reveal should be achieved along the entire height of the jamb.

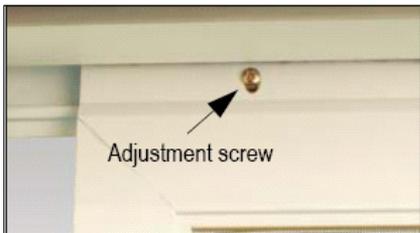

INTEGRITY SWINGING FRENCH DOORS

OPERATION AND MAINTENANCE

Your French Door requires very little maintenance. To maintain sill appearance, wash with a mild soap and water solution.

Remove fresh paint splashes, grease or caulk with 50% isopropyl alcohol. You may wish to remove door panels for moving or other reasons. If you need them removed, please contact your Infinity retailer for either detailed instructions or for a service person to remove the panel for you.

HANDLE OPERATION FOR THE MULTI-POINT LOCK

Always close and lock your passive panel first and the operating panel (with thumb turn) second. Integrity's multi-point hardware has locking bolts at the head and base of the door. Lifting the handle 45 degrees upward will set the head and foot bolts in place for a secure seal. A 90 degree turn of the key from the outside or the thumb turn on the inside will lock the deadbolt in the handle assembly. When the deadbolt is unlocked, downward pressure on the handle will release the bolts and latch and the door will open. Securely lock by engaging the deadbolt, head and foot bolts; using only one or the other does not offer full security.

HINGE ADJUSTMENT PROCEDURES

Should you find it necessary to make minor adjustments to your Integrity Inswing French door after it has been permanently installed, the adjustable hinge system will allow you to do this.

IMPORTANT: Adjustable hinges are not intended to compensate for an improperly installed unit.

Adjustments should only be made when panel misalignment is visible or causes poor operation of door/lock. Make any adjustments in small increments, check results, readjust or proceed as required. The vertical adjustment screw located on center hinge(s) has a range of 32 turns. Horizontal adjustment screws located on top and bottom hinges have a 7 turn range.

Check panel clearance at sill and head jamb. The panel should have 3/16" clearance at head jamb and at bottom. Align panel vertically as needed by rotating center hinge vertical "V" Phillips head adjustment screw. The arrow on hinge indicates direction the stationary or jamb leaf/pin will travel in relation to operator panel/adjustment leaf. Check index mark on hinge leaf (near patent number) and adjustment leaf edge to determine amount and direction of panel movement. See illustration.




Check panel alignment with locking jamb; panel should have 3/16" clearance along the jamb. Rotate horizontal adjustment screw clockwise to increase, counterclockwise to decrease jamb/panel clearance at the appropriate hinge i.e. if increasing clearance at top, bottom hinge may have to be adjusted to decrease clearance to avoid hinge binding. See illustration.



After panel alignment is corrected, recheck latch and deadbolt operation.

SWINGING SCREEN REMOVAL

If you live in a cold climate, it is recommended that during the winter months you remove the screen door to avoid snow and ice from collecting, causing the mesh to sag. To remove the swinging screen door, first open the active screen panel and disconnect the auto closer. Remove the #6 x 1/2" screw attaching the closer to the head jamb bracket. Then remove the hinge pins from the active screen panel hinges, remove the panel from the hinges and store. On XX configurations, open the passive screen panel and remove the hinge pins in the same manner as the active. Adjust the closing tension on your swinging screen door by loosening the two screws attaching the door bracket to the screen panel. Slide the bracket and closer left or right as needed and tighten screws. Adjust the closing speed by tightening or loosening the adjusting screw located at the rear of the cylinder assembly.

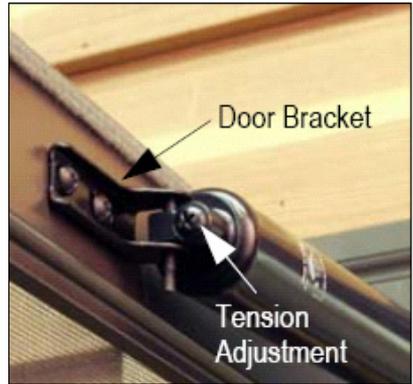

CARE OF PVD FINISHES

Physical Vapor Deposition, also known as PVD is the name for an extremely durable and environmentally friendly finish which is popular in today's market. PVD Finishes are resistant to fading and discoloration by direct sunlight, ultraviolet light or humidity and also withstands the harsh environmental elements found in some coastal areas.

As with many finishes, care is required to help maintain the appearance of the PVD finish.

- Periodically (bi-monthly) it is recommended that the surface be cleaned thoroughly with a soft, non-abrasive cloth moistened slightly with soap and water.
- Do not use abrasive materials (dry or liquid) during the cleaning process of your PVD finish.
- Wipe off any excess liquid with a soft cloth in order to dry the product completely to avoid any water spots.

Infinity Replacement Windows Limited Lifetime Warranty

This Limited Warranty applies to Infinity® windows and doors purchased from an authorized Infinity retailer. This Limited Warranty is applicable only to product installed in the U.S.A. and Canada. Marvin® and Integrity® brand products are subject to separate warranties, which are available at www.marvin.com/warranty or www.integritywindows.com/warranty. “Limited Warranty” means and includes the Limited Lifetime Warranty and the 10/20 Limited Warranty, below.

LIMITED LIFETIME WARRANTY

Subject to the terms and conditions below, Infinity warrants to the original owner-occupant of the single-family dwelling in which the product is installed that the Ultrex® fiberglass and other non-glass components will be free from manufacturing defects for as long as you own and occupy the home. Hardware in coastal applications, glass, and Ultrex fiberglass finish are not covered under the Limited Lifetime Warranty; they are subject to the 10/20 Limited Warranty, below.

TRANSFERABILITY

If you sell or cease to occupy your home within the term of the 10/20 Limited Warranty (calculated from the original date of purchase), the 10/20 Limited Warranty will apply for the remainder of its term. The 10/20 Limited Warranty is fully transferable.

REGISTRATION

To obtain the Limited Lifetime Warranty, you must register your products with Infinity, within sixty (60) days of product installation, by completing the Warranty Registration form available at <http://warranty.infinitywindows.com/>. You may also register by calling 800-533-6898. If you do not register your products within sixty (60) days of installation, you will not receive the Limited Lifetime Warranty; instead, you will receive the 10/20 Limited Warranty, below.

10/20 LIMITED WARRANTY

Subject to the terms and conditions below, Infinity warrants to the owner of the building (which includes any commercial building or other building which is not an owner-occupied, single-family detached dwelling) into which the product is installed that the Ultrex fiberglass, including the Ultrex fiberglass finish, and other non-glass components (including non-Ultrex substrate used in non-rectangular products) will be free from manufacturing defects for ten (10) years from the original date of product purchase. Non-stainless steel hardware, hardware without physical vapor deposition (“PVD”), and hardware not otherwise specifically-designated as having a “coastal” finish, when installed within one (1) mile of a sea coast or other salt water source, are not warranted. Standard insulating glass with stainless steel spacers is warranted against seal failure resulting in visible obstruction through the glass for twenty (20) years from the original date of product purchase. All other glass and glass features are provided with the same warranties, limitations, and exclusions Infinity receives from its supplier; contact Infinity for further details. Glass warranties apply to factory-installed glass or Infinity-supplied glass installed by Infinity-authorized service personnel.

EXCLUSIVE REMEDY

If a covered defect appears during the term of the applicable warranty, Infinity will, at its option, repair or replace the product or component, or refund the price paid for the defective product or component. Removal, shipping costs, installation, finishing, refinishing, and disposal costs and services are not included. Infinity will endeavor to supply original replacement parts; however, replacement parts may differ from the original parts. Replacement parts, including upgrades, are warranted for the remainder of the original product warranty.

EXCLUSIONS

Damage, defects, or problems resulting from causes outside Infinity's control are excluded from coverage under the Limited Warranty. Such causes include, without limitation:

INSTALLATION, MAINTENANCE, AND ACTS OF GOD

- faulty or improper storage, handling, installation, finishing, operation, or use
- installation not in conformance with Infinity's installation instructions and applicable building codes
- caulking, trim packages, or other materials used in product installation
- non-standard installation, such as non-vertical or sloped glazing, upside down, or out-of-square
- installation or use in inappropriate applications, including applications exceeding design standards
- field mulls; field finishes
- insulating glass installed more than 5000 feet above sea level without capillary tubes (except as specifically provided in the Infinity Limited Warranty High Altitude Supplement)
- failure to follow Infinity's care and maintenance instructions
- failure to properly treat, and maintain EverWood® surface
- use of brick wash, razor blades or other inappropriate cleaners, chemicals, or solvents; mechanical abrasion of finish
- misuse, abuse, modification, alteration, accident, negligence
- shifting or settling of the structure in which the product is installed; vibration
- extreme weather events, extreme or unusual atmospheric conditions
- exposure to excessive localized heat, moisture, or water leakage
- normal wear and tear; normal weathering; ripping or other damage to screens associated with normal use
- normal discoloration or fading of finishes, or other minor finish imperfections which do not affect product performance
- glass imperfections consistent with ASTM or other industry standards, which do not affect structural integrity
- insects
- war, insurrection, civil unrest, terrorism, Acts of God

OTHER EXCLUSIONS

- Warp. Bow, twist, and warp of doors shall not be considered defects unless in excess of ¼" in the plane of the door.
- Synthetic Stucco. Installation in structures that do not allow for proper moisture management, e.g., exterior insulation and finish systems (EIFS) or "synthetic stucco" is not covered under the Limited Warranty.
- Thermal Efficiency. Infinity does not warrant the amount or percentage of argon or other inert gas present in insulating glass at any time after manufacture. Inert gas dissipates over time, and may be ineffective in products manufactured with capillary tubes. Thermal efficiencies vary with the application of the product. Infinity does not warrant a specific level of thermal efficiency will be maintained by inert gas, low emissivity coatings, or other product features.
- Condensation. Condensation is not a product defect, but the result of excess humidity. Condensation, frost, or mold, mildew, or fungus on product surfaces is not covered by the Limited Warranty.
- Finish Degradation. Degradation or failure of the Ultrex® finish, hardware, or other components due to conditions such as air pollutants, acid rain, salt, sand, chemicals, or other corrosive or abrasive substances is not covered by the Limited Warranty.

- Screens. Screens are not designed to, and will not prevent falls.
- Suitability. Determining the suitability and compliance with local or other applicable building codes or standards, of all building components, including the use of any Infinity product, and the design and installation of any flashing or sealing system, is the responsibility of the buyer, user, architect, contractor, installer, and/or other construction professional. Infinity will not be liable for any problem or damage relating to inappropriate or faulty building design or construction, maintenance, installation, or selection of products. Windows and doors are only one element of a structure; Infinity does not warrant that third party certification of a building or project to any specific standard will be achieved through the use of any Integrity product.

DISCLAIMERS, LIMITATIONS, AND ADDITIONAL TERMS AND CONDITIONS

Disclaimers

This Limited Warranty is the only warranty, written or oral, express or implied, provided by Infinity. No dealer, employee, or agent of Infinity, nor any third party, may create or assume any other liability, obligation, or responsibility on behalf of Infinity. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. Any implied warranty which cannot be disclaimed under applicable law will be limited in duration to the shortest permissible term and, in any event, will not exceed the term of the applicable express limited warranty; the requirements for presenting any claim so affected will be as provided in this Limited Warranty. Any product or component not specifically subject to this Limited Warranty or another written Infinity product warranty is provided AS IS and without warranty. This Limited Warranty gives you specific legal rights and you may also have other rights, which may vary from state to state. THIS WARRANTY IS NOT A WARRANTY OF FUTURE PERFORMANCE OR A STATEMENT OF THE USEFUL LIFE OF ANY INFINITY PRODUCT, BUT ONLY A WARRANTY TO REPAIR, REPLACE, OR REFUND.

Limitations

IN NO EVENT WILL INFINITY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. IN NO EVENT WILL INFINITY'S LIABILITY EXCEED THE PRICE PAID FOR THE AFFECTED PRODUCT OR COMPONENT. The limitations of warranty and liability set forth herein shall survive and apply, even if the exclusive remedy set forth in this Limited Warranty is found to have failed of its essential purpose.

Certifications and Ratings

Many standard Infinity products are labeled with the Window & Door Manufacturers Association (WDMA) Hallmark Certification. WDMA Certification is based on the performance of a single sample of the product at the time of manufacture. Many standard Infinity products are labeled with National Fenestration Rating Council (NFRC) ratings. NFRC ratings are based on a combination of computer simulations and physical testing of product samples. Certifications and ratings apply to single products only and do not apply to mulled or combined products. Performance of individual products may vary and will change over time, depending upon the conditions of use. WDMA certifications and NFRC ratings are not performance warranties. For details on Hallmark Certification, go to www.WDMA.com. For details on NFRC Energy Performance ratings, go to www.NFRC.org.

No Waiver

Infinity may, in its discretion, extend benefits beyond what is covered under this Limited Warranty. Any such extension shall apply only to the specific instance in which it is granted, and shall not constitute a waiver of Infinity's right to strictly enforce the exclusions, disclaimers, and limitations set forth in this Limited Warranty in any or all other circumstances.

Warranty Claims

All warranty claims must be made within sixty (60) days of the appearance of the defect. To make a warranty claim, contact your local Infinity dealer or distributor. If you do not know the name of your local dealer or distributor, use the "View Retailers" feature at www.infinitywindows.com, or call 800-533-6898 to locate the one nearest you. If, after five days, your dealer or distributor has not responded, send a written request to Infinity Windows & Doors, PO Box 100, Warroad, MN 56763, Attn: Warranty Department. Include the following information: your name, address, and telephone number, the date you purchased your product, the name of the dealer or distributor from whom you purchased your product, a description of product, order number (etched in the corner of each glass pane). specific definition of problem or defect, actions you have taken and contacts you have made with your local dealer or distributor. Once we've received your letter, we will respond to your claim promptly.

Effective Date: January 1, 2011

Infinity Replacement Windows High Altitude Lifetime Warranty Supplement

This Limited Warranty Supplement, in conjunction with the Infinity Limited Warranty, applies to Infinity products purchased from and installed by an authorized Infinity installing retailer in the United States or Canada. THIS LIMITED WARRANTY SUPPLEMENT IS SUBJECT TO AND INCORPORATES THE TERMS, CONDITIONS, LIMITATIONS, AND EXCLUSIVE REMEDY SET FORTH IN THE INFINITY LIMITED WARRANTY (available from your Infinity dealer, at <http://www.infinitywindows.com>, or by calling 1-800-533-6898).

The terms and conditions of the Infinity Limited Warranty will apply to glass without capillary tubes in the specific products identified in Infinity's published Capillary Tube Usage Guidelines ("Guidelines") and installed at or below the altitude identified in the Guidelines for such product. Glass without capillary tubes installed above the altitudes identified in the Guidelines is not warranted. Glass without capillary tubes in products not identified in the Guidelines is not warranted above 5000 feet. Infinity may amend the Guidelines at any time in its sole discretion.

Product style, size, shape, and configuration all affect glass installed in high altitude environments. For certain products, aesthetic effects may be observed at altitudes above 5000 feet. Infinity products are made to order in a wide variety of styles, sizes, shapes, and configurations. For best results, please consult your authorized Infinity installing retailer when installing product above 5000 feet.

LIMITATIONS

In addition to all terms, conditions, limitations, and exclusive remedy set forth in the Infinity Limited Warranty, coverage under this Limited Warranty Supplement does not extend to the aesthetic quality of the glass. Bowing, curvature, and other distortions of glass will naturally occur with increased altitude, and are not considered defects. Glass bowing or deflection may also result in check-rail interference in sliding windows or audible sounds caused by sash or panels during operation.

IN NO EVENT WILL INFINITY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. IN NO EVENT WILL INFINITY'S LIABILITY EXCEED THE PRICE PAID FOR THE AFFECTED PRODUCT OR COMPONENT. The limitations of liability and disclaimers of warranty set forth herein shall survive and apply, even if the exclusive remedy is found to have failed of its essential purpose.

DISCLAIMER

This Limited Warranty supplement, together with the Infinity Limited Warranty, is the only warranty, written or oral, express or implied, provided by Infinity. No dealer, employee, or agent of Infinity, nor any third party, may create or assume any other liability, obligation, or responsibility on behalf of Infinity. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. Any implied warranty which cannot be disclaimed under applicable law will be limited in duration to the shortest permissible term and, in any event, will not exceed the term of the applicable express limited warranty; the requirements for presenting any claim so affected will be as provided in the Infinity Limited Warranty. This Limited Warranty Supplement gives you specific legal rights and you may also have other rights, which may vary from state to state. THIS LIMITED WARRANTY SUPPLEMENT IS NOT A WARRANTY OF FUTURE PERFORMANCE OR A STATEMENT OF THE USEFUL LIFE OF ANY INFINITY PRODUCT, BUT ONLY A WARRANTY TO REPAIR, REPLACE, OR REFUND.

Integrity Windows and Doors Limited Lifetime Warranty

This Limited Warranty applies to Integrity® windows and doors purchased from an authorized Integrity dealer, and extends to the owner of the structure in which the products are originally installed. This Limited Warranty is fully transferable. This Limited Warranty is applicable only to product installed in the U.S.A. and Canada. For information on warranties available in other countries, please contact Integrity at the address or phone number below.

GLASS COMPONENTS

Glass warranties apply to factory-installed glass or Integrity-supplied glass installed by Integrity-authorized service personnel. Clear insulating glass with stainless steel spacers is warranted against seal failure resulting in visible obstruction through the glass for twenty (20) years from the original date of purchase. Glass is warranted against stress cracks caused by manufacturing defects for ten (10) years from the original date of purchase. All other glass and glass features are provided with the same warranties, limitations, and exclusions Integrity receives from its supplier; contact Integrity for further details.

NON-GLASS COMPONENTS

Non-glass components are warranted to be free from manufacturing defects for ten (10) years from the original date of purchase. Non-stainless steel hardware, hardware without physical vapor deposition ("PVD"), and hardware not otherwise specifically-designated as having a "coastal" finish, when installed within one (1) mile of a sea coast or other salt water source, are not warranted.

EXCLUSIVE REMEDY

If a covered defect appears during the term of the applicable warranty, Integrity will, at its option, repair or replace the product or component, or refund the price paid for the defective product or component. Removal, installation, finishing, refinishing, and disposal costs and services are not included. Integrity will endeavor to supply original replacement parts; however, replacement parts may differ from the original parts. Replacement parts, including upgrades, are warranted for the remainder of the original product warranty.

EXCLUSIONS

Damage, defects, or problems resulting from causes outside Integrity's control are excluded from coverage under the Limited Warranty. Such causes include, without limitation:

Installation, Maintenance, and Acts of God

- installation not in conformance with Integrity's installation instructions and applicable building codes
- non-standard installation, such as non-vertical or sloped glazing, upside down, or out-of-square
- installation or use in applications exceeding design standards
- field Mulls; field finishes
- insulating glass installed more than 5000 feet above sea level without capillary tubes (except as specifically provided in the Integrity Limited Warranty High Altitude Supplement)
- installation or use of Wood-Ultrex® product near pools, saunas, hot tubs, or other high-humidity environments
- failure to follow Integrity's care and maintenance instructions
- failure to properly treat, seal, and maintain exposed wood
- use of brick wash, razor blades or other inappropriate cleaners or chemicals
- misuse, abuse, modification, alteration, accident, negligence

- shifting or settling of the structure in which the product is installed
- extreme weather events, extreme or unusual atmospheric conditions
- normal wear and tear; normal discoloration or fading of finishes
- variation in wood color, texture, and grain
- glass imperfections consistent with ASTM or other industry standards which do not affect structural integrity
- war, insurrection, civil unrest, terrorism, or Acts of God

WARP

Bow, twist, and warp shall not be considered defects unless in excess of ¼” in the plane of the door.

WATER MANAGEMENT

Products installed in wall systems that do not allow for proper moisture management, such as exterior insulation and finish systems (EIFS) or “synthetic stucco” without effective engineered drainage systems, are not covered under the Limited Warranty.

THERMAL EFFICIENCY

Integrity does not warrant the amount or percentage of argon or other inert gas present in insulating glass at any time after manufacture. Inert gas dissipates over time, and may be ineffective in products manufactured with capillary tubes. Thermal efficiencies vary with the application of the product. Integrity does not warrant a specific level of thermal efficiency will be maintained by inert gas, low emissivity coatings, or other product features.

CONDENSATION

Condensation is not a product defect, but the result of excess humidity. Condensation, frost, or mold, mildew, or fungus on product surfaces is not covered by the Limited Warranty.

FINISH DEGRADATION

Degradation or failure of the Ultrex® finish, hardware, or other components due to environmental conditions such as air pollutants, acid rain, salt accumulation, chemicals, or exposure to other corrosive or abrasive substances is not covered by the Limited Warranty.

SCREENS

Screens are not designed to, and will not prevent falls.

DISCLAIMERS, LIMITATIONS, AND ADDITIONAL TERMS AND CONDITIONS

Disclaimers

This Limited Warranty is the only warranty, written or oral, express or implied, provided by Integrity. No dealer, employee, or agent of Integrity, nor any third party, may create or assume any other liability, obligation, or responsibility on behalf of Integrity. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. Any implied warranty which cannot be disclaimed under applicable law will be limited in duration to the shortest permissible term and, in any event, will not exceed the term of the applicable express limited warranty; the requirements for presenting any claim so affected will be as provided in this Limited Warranty. Any product or component not specifically subject to this Limited Warranty or another written Integrity product warranty is provided AS IS and without warranty. This Limited Warranty gives you specific legal rights and you may also have other rights, which may vary from state to state. THIS WARRANTY IS NOT A WARRANTY OF FUTURE PERFORMANCE OR A STATEMENT OF THE USEFUL LIFE OF ANY INTEGRITY PRODUCT, BUT ONLY A WARRANTY TO REPAIR, REPLACE, OR REFUND.

LIMITATIONS

IN NO EVENT WILL INTEGRITY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. IN NO EVENT WILL INTEGRITY'S LIABILITY EXCEED THE PRICE PAID FOR THE AFFECTED PRODUCT OR COMPONENT. The limitations of warranty and liability set forth herein shall survive and apply, even if the exclusive remedy set forth in this Limited Warranty is found to have failed of its essential purpose.

CERTIFICATIONS AND RATINGS

Many standard Integrity products are labeled with the Window & Door Manufacturers Association (WDMA) Hallmark Certification. WDMA Certification is based on the performance of a single sample of the product at the time of manufacture. Many standard Integrity products are labeled with National Fenestration Rating Council (NFRC) ratings. NFRC ratings are based on a combination of computer simulations and physical testing of product samples. Certifications and ratings typically apply to single products only; however certain factory-mulled or combined product configurations may also be certified. Performance of individual products may vary and will change over time, depending upon the conditions of use. WDMA certifications and NFRC ratings are not performance warranties. For details on Hallmark Certification, go to www.WDMA.com. For details on NFRC Energy Performance ratings, go to www.NFRC.org.

SUITABILITY

Determining the suitability and compliance with local or other applicable building codes or standards, of all building components, including the use of any Integrity product, and the design and installation of any flashing or sealing system, is the responsibility of the buyer, user, architect, contractor, installer, and/or other construction professional. Integrity will not be liable for any problem or damage relating to inappropriate or faulty building design or construction, maintenance, installation, or selection of products. Windows and doors are only one element of a structure; Integrity does not warrant that third party certification of a building or project to any specific standard will be achieved through the use of any Integrity product.

NO WAIVER

Integrity may, in its discretion, extend benefits beyond what is covered under this Limited Warranty. Any such extension shall apply only to the specific instance in which it is granted, and shall not constitute a waiver of Integrity's right to strictly enforce the exclusions, disclaimers, and limitations set forth in this Limited Warranty in any or all other circumstances.

WARRANTY CLAIMS

All warranty claims must be made within sixty (60) days of the appearance of the defect. To make a warranty claim, contact your local Integrity dealer or distributor. If you do not know the name of your local dealer or distributor, use the "Where to Buy" feature at www.integritywindows.com, or call 800-533-6898 to locate the one nearest you. If, after five days, your dealer or distributor has not responded, send a written request to Integrity Windows & Doors, PO Box 100, Warroad, MN 56763, Attn: Warranty Department. Include the following information: your name, address, and telephone number, the date you purchased your product, the name of the dealer or distributor from whom you purchased your product, a description of product, order number, specific definition of problem or defect, actions you have taken and contacts you have made with your local dealer or distributor. Once we've received your letter, we will respond to your claim promptly.

Effective Date: January 1, 2011

Integrity Windows and Doors High Altitude Limited Warranty Supplement

This Limited Warranty Supplement, in conjunction with the Integrity® Limited Warranty, applies to Integrity products purchased from an authorized Integrity dealer, and installed in the United States or Canada. THIS LIMITED WARRANTY SUPPLEMENT IS SUBJECT TO AND INCORPORATES THE TERMS, CONDITIONS, LIMITATIONS, AND EXCLUSIVE REMEDY SET FORTH IN THE INTEGRITY LIMITED WARRANTY (available from your Integrity dealer, at <http://www.integritywindows.com>, or by calling (888) 419-0076.)

The terms and conditions of the Integrity Limited Warranty will apply to glass without capillary tubes in the specific products identified in Integrity's published Capillary Tube Usage Guidelines ("Guidelines") and installed at or below the altitude identified in the Guidelines for such product. Glass without capillary tubes installed above the altitudes identified in the Guidelines is not warranted. Glass without capillary tubes in products not identified in the Guidelines is not warranted above 5000 feet. Integrity may amend the Guidelines at any time in its sole discretion.

Product style, size, shape, and configuration all affect glass installed in high altitude environments. For certain products, aesthetic effects may be observed at altitudes above 5000 feet. Integrity products are made to order in a wide variety of styles, sizes, shapes, and configurations. For best results, please consult your authorized Integrity dealer when installing product above 5000 feet.

LIMITATIONS

In addition to all terms, conditions, limitations, and exclusive remedy set forth in the Integrity Windows and Doors Limited Warranty, coverage under this Limited Warranty Supplement does not extend to the aesthetic quality of the glass. Bowing, curvature, and other distortions of glass will naturally occur with increased altitude, and are not considered defects. Glass bowing or deflection may also result in check-rail interference in sliding windows or audible sounds caused by sash or panels during operation.

IN NO EVENT WILL INTEGRITY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. IN NO EVENT WILL INTEGRITY'S LIABILITY EXCEED THE PRICE PAID FOR THE AFFECTED PRODUCT OR COMPONENT. The limitations of liability and disclaimers of warranty set forth herein shall survive and apply, even if the exclusive remedy is found to have failed of its essential purpose.

DISCLAIMER

This Limited Warranty supplement, together with the Integrity Limited Warranty, is the only warranty, written or oral, express or implied, provided by Integrity. No dealer, employee, or agent of Integrity, nor any third party, may create or assume any other liability, obligation, or responsibility on behalf of Integrity. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. Any implied warranty which cannot be disclaimed under applicable law will be limited in duration to the shortest permissible term and, in any event, will not exceed the term of the applicable express limited warranty; the requirements for presenting any claim so affected will be as provided in the Integrity Limited Warranty. This Limited Warranty supplement gives you specific legal rights and you may also have other rights, which may vary from state to state. THIS LIMITED WARRANTY SUPPLEMENT IS NOT A WARRANTY OF FUTURE PERFORMANCE OR A STATEMENT OF THE USEFUL LIFE OF ANY INTEGRITY PRODUCT, BUT ONLY A WARRANTY TO REPAIR, REPLACE, OR REFUND.

Effective Date: January 1, 2011



Infinity® from Marvin
Warroad, MN 56763
1-800-372-1072
In Canada, call
1-800-263-6161

www.infinitywindows.com

Part # 19970331
Printed in the U.S.A.
Specifications subject to change without notice.

INFINITY[®]
 from **MARVIN**
REPLACEMENT WINDOWS